

HONDA INSTALLATION INSTRUCTIONS


Accessory
BODY SIDE MOLDING

Application
2011 CR-V


Publications No.
All 44614
Issue Date
AUG 2010

PARTS LIST


Left front body side molding

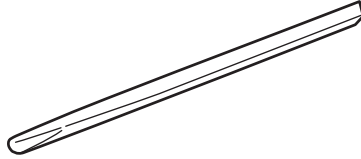


Right front body side molding

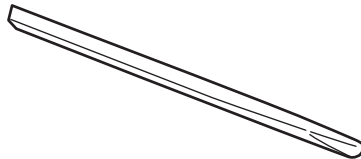


Left rear body side molding




Right rear body side molding




Alcohol swab

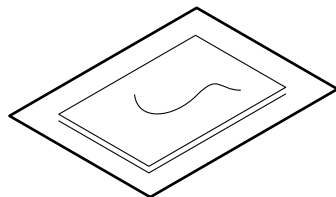

Front template

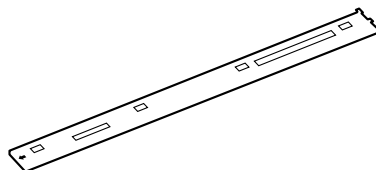


Rear template

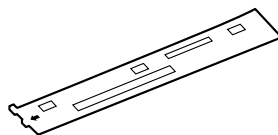

TOOLS AND SUPPLIES REQUIRED

Masking tape
Rubber roller
T/N MHLE54D

Illustration of the Body Side Moldings on the vehicle

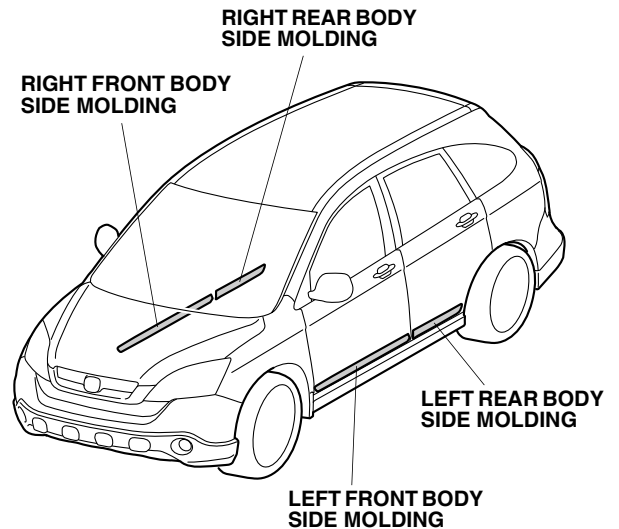


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Do not damage the body paint finish.
- This body side molding kit should be installed only if the ambient air temperature is above 15°C (60°F). Heat the body side molding and the bonding surface with a hair dryer set on LOW if the ambient air temperature is below 15°C (60°F).
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customers.
- These installation instructions show the left side moldings being installed. The same procedure applies to installing the right side moldings.

- Using an alcohol swab, clean the area where the left front body side molding will attach.

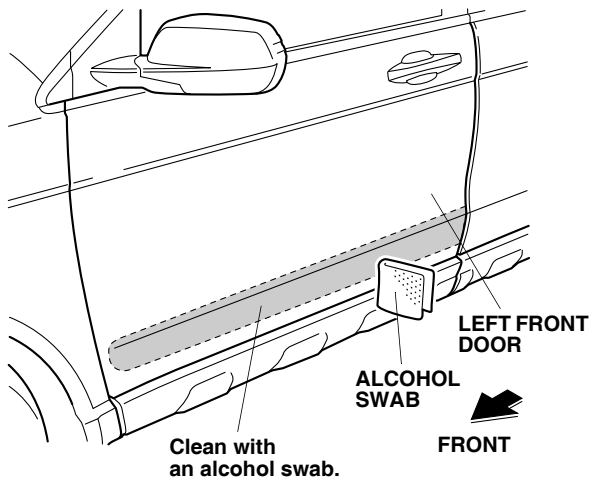


- Insert the tab on the front template around the rear edge of the left front door.

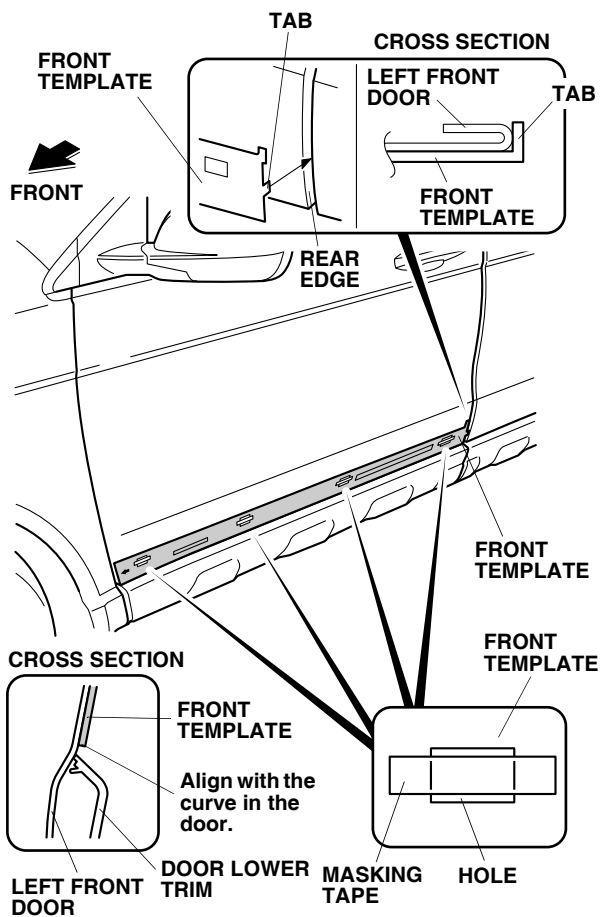


- Secure the front template to the left front door panel with pieces of masking tape as shown.


- Peel back the ends of the adhesive backings shown and temporarily attach them to the outer surface of the left front body side molding with pieces of masking tape.

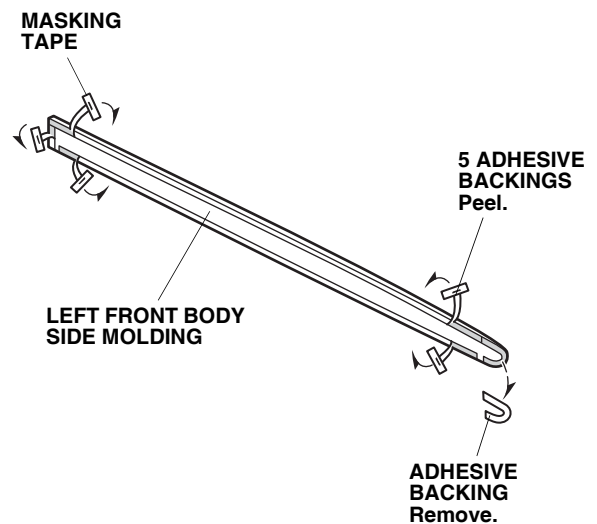


- Remove the remaining adhesive backing.
- Align the left front body side molding and attach it to the left front door as shown.

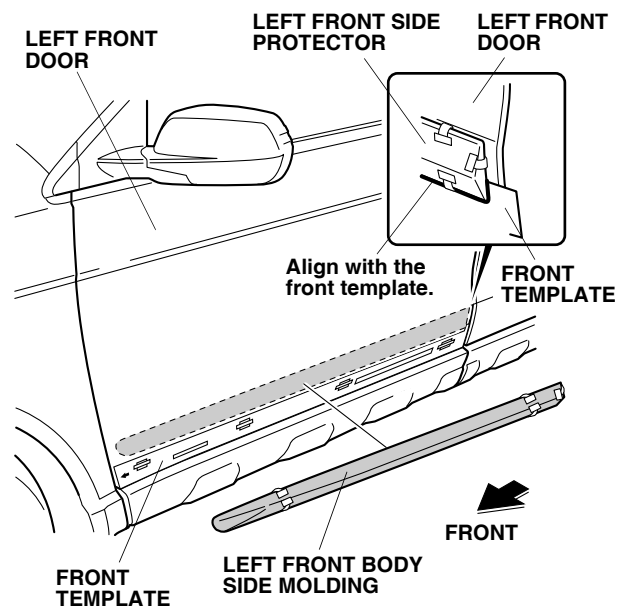


- While applying light pressure against the left front body side molding, carefully remove the adhesive backings.

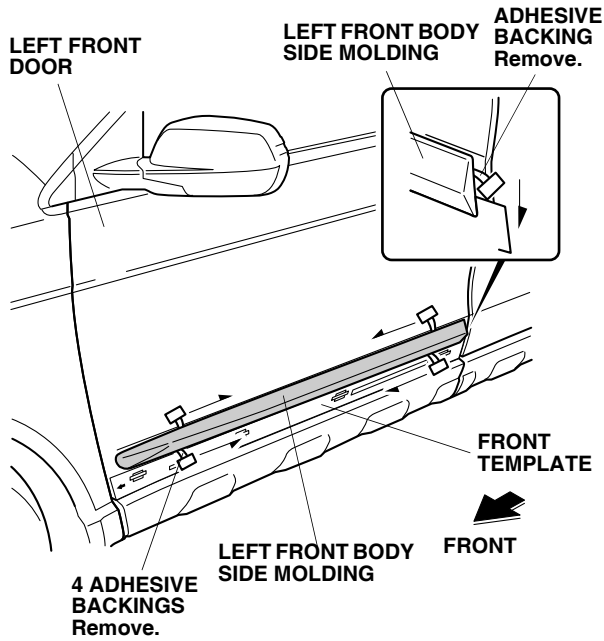


- Using the palm of your hand, firmly press the body side molding against the left front door.
- Remove the front template.
- Using a rubber roller, apply pressure against the body side molding and roll from one end to the other.

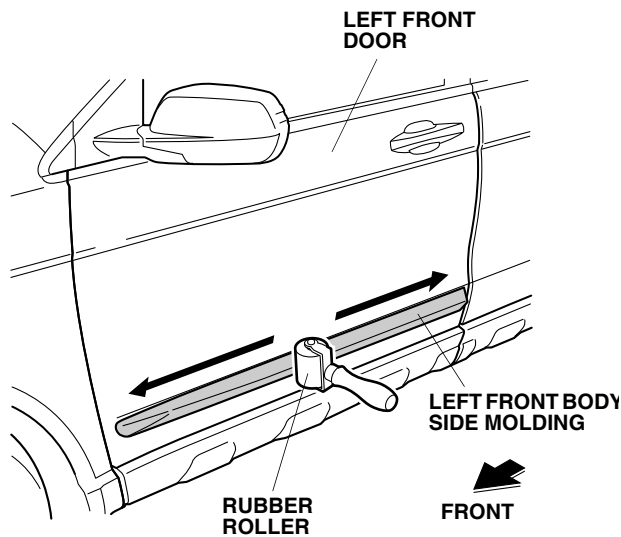

- Using an alcohol swab, clean the area where the left rear body side molding will attach.

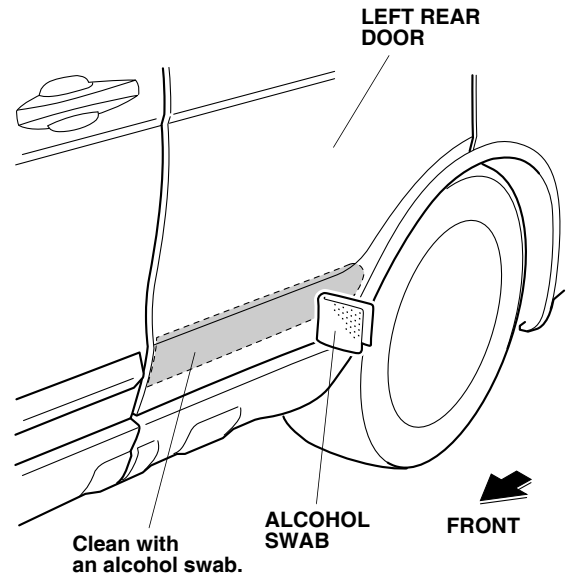


- Insert the tab on the rear template around the front edge of the left rear door.

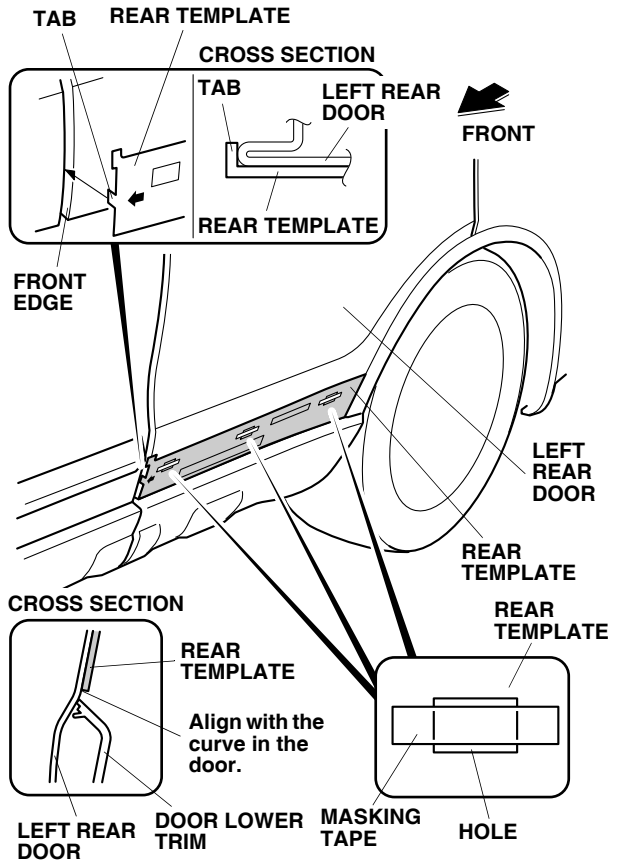


- Secure the rear template to the left rear door panel with pieces of masking tape as shown.


14. Peel back the ends of the adhesive backings shown and temporarily attach them to the outer surface of the left rear body side molding with pieces of masking tape.

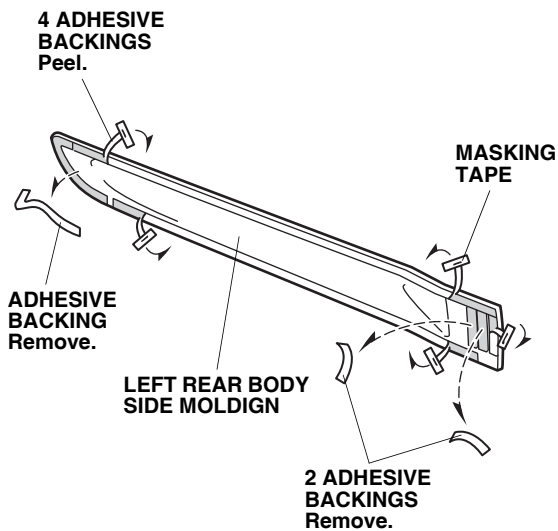


15. Remove the remaining adhesive backings.
16. Align the left rear body side molding and attach it to the left rear door as shown.

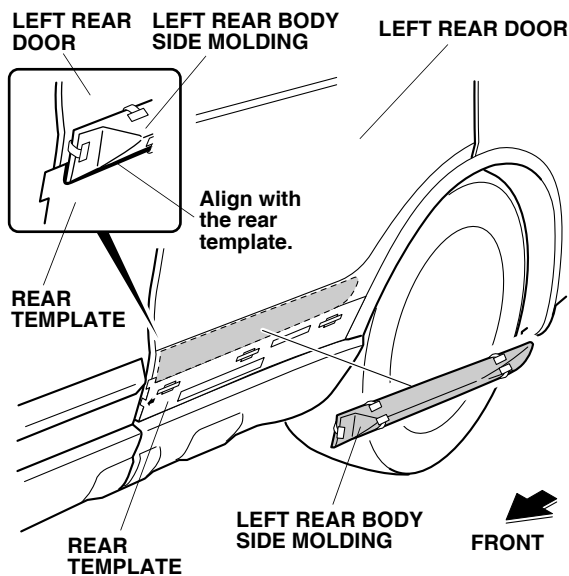

17. While applying light pressure against the left rear body side molding, carefully remove the adhesive backings.

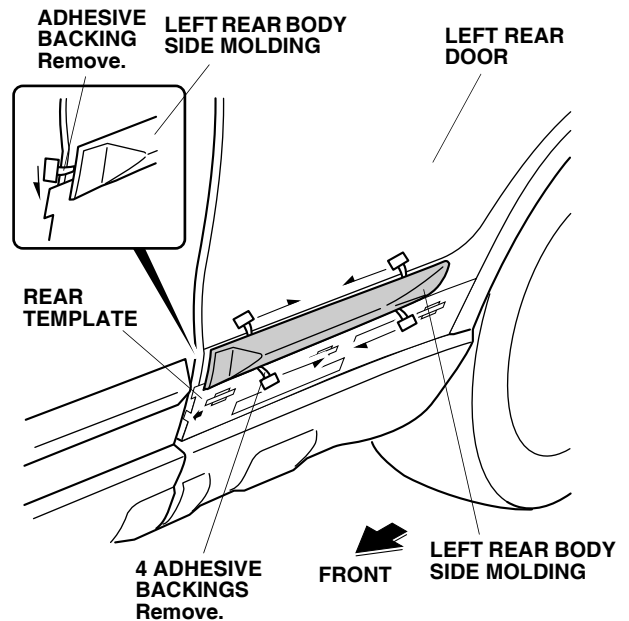

18. Using the palm of your hand, firmly press the body side molding against the left rear door.
19. Remove the rear template.
20. Using a rubber roller, apply pressure against the body side molding and roll from one end to the other.

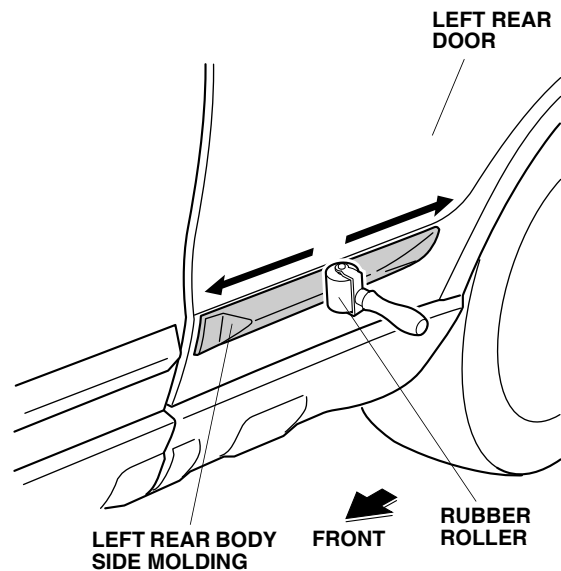

21. Repeat steps 1 through 20 on the right side of the vehicle.